



HOW TO CUSTOMIZE ?



A DIGITAL PLOTTER




HEAT PRESS



CHEMICA'S PRODUCTS



A TEXTILE SUPPORT

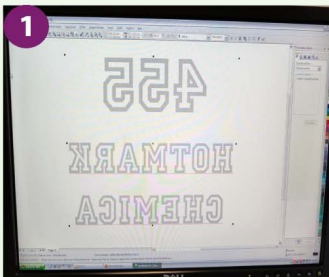

1
Scan or create your design.




2
Cut in mirror image on plotter.



3
Weed the excess material.




4
Apply the weeded design on the garment. Use a silicone paper over the design to protect it.

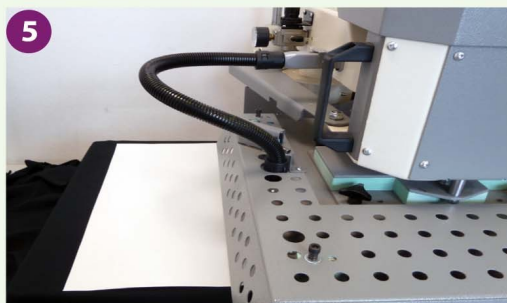

5
To heat transfer, set up pressure, time and temperature recommended for each product .



6
Peel the backing cold or warm (see our datasheets).

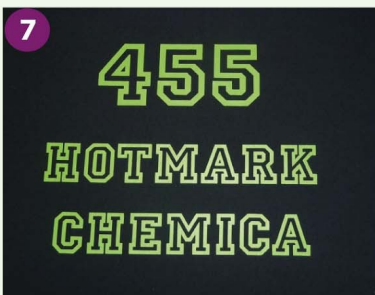

7
Congratulations: you're now finished !

